

BEHA RAW

SLIK BEHANDLER DU MEG RIKTIG
HOW TO TREAT ME RIGHT

BEHA

By

Hedver Einarsson



Contact information: Email: info@scandinaviantrading.co.uk Tel: 01932 645050
Unit 2 Glen Court, Canada Road, Byfleet, KT14 7JL

BEHA RAW

Fig. 1

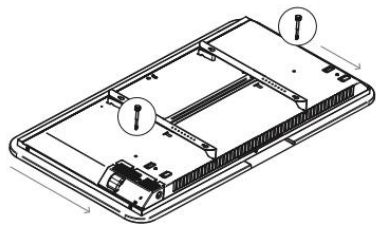 


Fig. 2

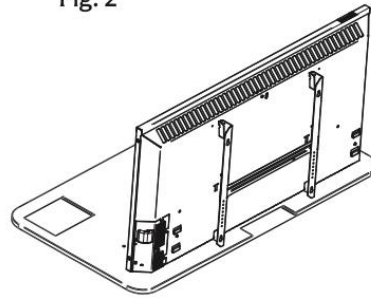 


Fig. 3

 
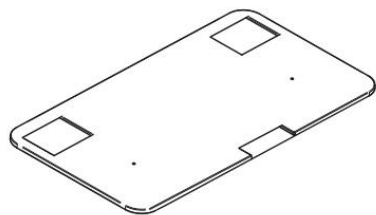 


Fig. 4

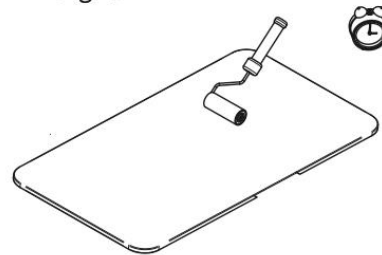

Thank you for choosing Beha Raw!

We hope you will be satisfied with your new heater, and that you will enjoy it for many years to come. Feel free to share a picture of the finished result on Instagram with #mybeha.

Best regards,
Beha

The panel heater must not be covered. The front panel must not be applied or covered with flammable material. Read the product's user manual carefully before use.

Beha Raw has a front panel that can be painted. Here are our tips and advice on how to paint and maintain your heater so that you can enjoy it for a long time.

1. Before you start

Here is a small checklist, regardless of whether the front panel is to be painted or sanded:

- When using sanding paper, wearing a dust mask and safety glasses are recommended
- Lint-free cloth
- Brushes or roller for applying primer and paint
- Disposable gloves

Preparation:

- Find a good place for the work to be carried out
- Have good light and a surface that protects the front panel
- Remember that the front panel must dry after priming/painting. Find a suitable place for this.

2. Dust drying

Before use, application of paint and for normal maintenance, wipe the surface with a damp, lint-free cloth.

3. Paint the surface

Beha Raw's front panel can be used "raw", - as it is. If you want to paint the surface, you can use a water-based acrylic paint. For the best possible and durable result the use of a primer before painting is recommended. The surface must be completely dry before painting. The heater must be cold before painting. Find a suitable place to lay down the heater and cover the floor. Place the heater face down, as shown in fig. 1. The lower edge of the heater should be facing you.

Loosen the two screws in the front panel from the heater, see fig. 1.

Unscrew the screws and separate the front panel from the heater (fig. 2) by pulling the heater-body gently towards you, as shown by the arrows in fig. 1.

If you want to paint the back, you can do it now (fig. 3). When you prime/paint the front side, flip the front panel as shown in fig. 4.

Allow the front panel to dry well before attaching it to the heater in the same way and sequence as it was removed.

The front panel consists of non-combustible material and withstands high temperatures.

The front panel must not be covered with flammable material such as wallpaper or textiles, or the like.



3.1 How to assemble the front panel

1. Carefully push the heater into the slots at the back of the front panel. It is important that the panel is pushed correctly into the steel brackets.
2. Insert the 2 fixing screws into the holes in the back plate. Make sure they go through the heater and into the front panel before tightening them. When the screws are positioned correctly, the screw-head is approx. 2.5 mm from the back plate. You can now carefully tighten them, so that the heater is fixed to the front panel. **Max. 3 turns.** Do not use tools and/or high torque.

Important: The screws must not be tightened so much that the back plate bends. The heater is now attached to the front panel.

4. Sanding the front panel

Beha Raw has a matte, rough surface structure. If you want less structure, the surface can be gently sanded with sandpaper. If you do, be aware that certain areas may appear somewhat glossier after paint has been applied. This can of course also be used to give the front panel an even more distinctive character. When plastering the use of a mask is recommended.

5. Repair of minor damages

If superficial wounds or scratches should occur on the front panel, carefully sand and plaster the area in question, before you repaint. Please note that the sanded and plastered area may have a smoother appearance than it that originally had.

6. Handle with care

The front panel of Beha Raw consists of a compact and compressed material. It should be handled with care, to avoid breakage and/or damage.

7. Waste management

The front panel can be disposed of together with other building materials.

Component	Material	Recycling
Packaging	PAP 20	Cardboard and paper
Screws	Steel	Metal
Front plate	Calcium silicate	Plaster

For information on waste management of the heater, read the respective user guide.

A unique surface

We are proud to offer Beha Raw front panels, which are completely untreated, raw and unique its expression. This unique character is what makes them special. It will occur differences and variations in color on and between different front panels. We encourage our customers to put their own stamp on Beha Raw, painting them. We will, however, point out that any surface treatment that takes place at your own responsibility. Potential changes that might occur thereafter, are outside Beha's area of responsibility. We believe in our customers' creativity and individuality, and we are happy to offer products that allow room for personal adaptation.





Contact information: Email: info@scandinaviantrading.co.uk Tel: 01932 645050
Unit 2 Glen Court, Canada Road, Byfleet, KT14 7JL