
HUNTONIT

INSTALLATION INSTRUCTIONS

PRE-PAINTED PANEL BOARD

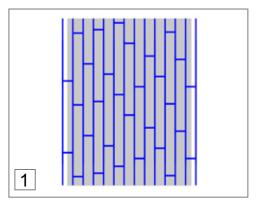

I. Distribute the width so that the first and last panel board are of equal width.



2. The panel boards must be allowed to acclimatise in the packaging at room temperature for 2 days prior to installation.

PANEL BOARD IN CEILINGS



3. Install across electrician's laths/battens spaced at intervals of max. cc 60 cm. When installing on existing screw-mounted ceilings, the panel can be attached independently of laths/battens. For ceilings without screw fastening points for nails/ screws; find the battens and attach the panel to them.




4. Cut the first board to the correct width. When cutting with a circular saw, the painted side must be face down.



5. Install the first row using string/chalk reel as guidance in order to start right.

NB: to be installed at a distance of approx. 10 mm to all walls.

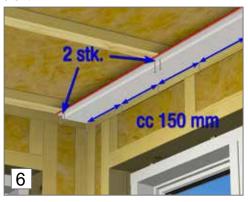

6. Nail spacing is cc 150 mm against wall and double nailing/screwing on each lath.



7. To prevent damage to the panel boards, used a punch when nailing the boards.



8. The boards must be fixed to electrician's laths or struts and should not be glued.



9. The rest of the panel boards are installed. Your new Huntonit ceiling in finished!

Recessed down lights can be installed in all our ceilings.

Panel boards can also be installed in wet rooms on condition that the ceiling is normal height and there is good ventilation. NB! Not in wet zones.

See further information and installation video on our website www.huntonit.no.

