


PRE-PAINTED PANEL BOARD

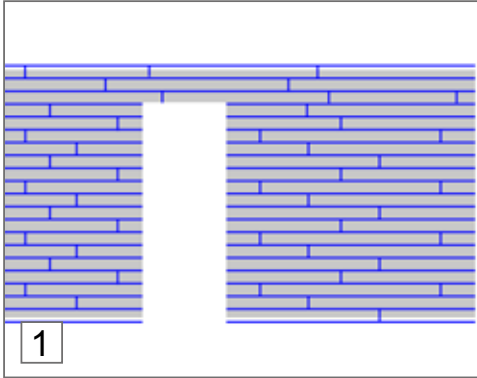

1. Distribute the width so that the first and last are of equal width.



2. The panel boards must be allowed to acclimatise in the packaging at room temperature for 2 days prior to installation.

HORIZONTAL BOARD ON WALLS



3. To be installed across studs at intervals of max. cc 60 cm. Installation on existing walls, the panel can be attached without laths/battens.



4. Cut the first board to the correct width. When cutting with a circular saw, the painted side must be face down.




5. Install mouldings



6. Your new Huntonit walls are finished!

See further information and installation video on our website www.huntonit.no.

 Byggma ASA strives to maintain a high of quality control. Despite this quality control some imperfections may occur. The user must control the panels before use – as our liability is limited to replacement of panels with imperfections. The manufacturer makes reservations against changes of specifications and printing errors.